


Importing the “Onefinity Myers Bit Set” and/or the “Two Moose Bit Set” in Vectric

1. Save the “Onefinity Myers Bit Set Tool Database Vectric.vtdb” and/or the “Two Moose Bit Set Tool Database Vectric.vtdb” file to your desktop or other location.
2. Open the Tool Database in Vectric



3. Select Import

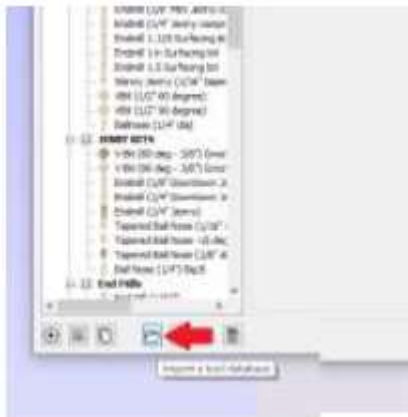

4. Locate and select the saved file, then hit “Open”

atabases



Carveco Tool Database instructions.docx



Carveco Tool Database Instructions.pdf




Onefinity Myers Bit Set Tool Database Vectric.vtdb



Onefinity Two Moose Bit Set Tool Database Vectric.vtdb

5. Then following dialog box will open. Select “Merge (No overwriting)”

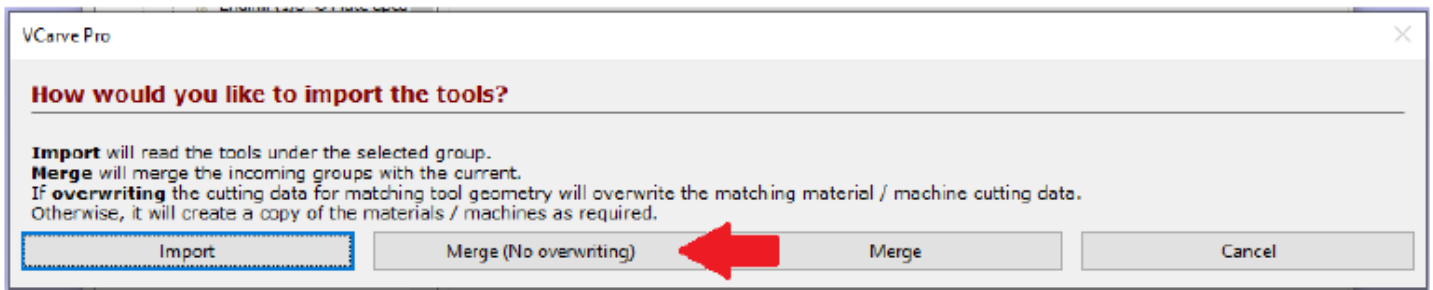

6. The selected Tool Database file will be added to Vectric the next time you open the application!